





# PLATFORM LENGTHS – CONFIGURATIONS SELF WEIGHT – LOAD CAPACITIES

TOTAL LENGTH		CANTILEVER LENGTH		HOIST DISTANCE		PLATFORM CONFIGURATION (M)	TOTAL PLATFORM WEIGHT*		MAXIMUM RATED WORKING LOAD	
FT	M	FT	M	FT	M	= END STIRRUP	LB	KG	LB	KG
6' - 9"	2	NONE		6' - 9"	2	2	176	80		
9' - 9"	3	NONE		9' - 9"	3	3	233	106		
13' - 6"	4	NONE		13' - 6"	4	2-2	289	131	2000	900
16' - 6"	5	NONE		16' - 6"	5	3-2	344	156		
19' - 6"	6	NONE		19' - 6"	6	3-3	367	167		
23' - 3"	7	NONE		23' - 3"	7	2-3-2	455	206	1500	680
26' - 3"	8	NONE		26' - 3"	8	3-2-3	491	223		
29' - 3"	9	NONE		29' - 3"	9	3-3-3	541	245		
33' - 0"	10	NONE		33' - 0"	10	3-2-2-3	609	276	1000	450
36' - 0"	11	NONE		36' - 0"	11	3-3-3-2	653	296		
39' - 0"	12	NONE		39' - 0"	12	3-3-3-3	696	316		
42' - 9"	13	NONE		42' - 9"	13	3-3-2-2-3	774	351	750	340
45' - 9"	14	NONE		45' - 9"	14	3-3-2-3-3	807	366		
48' - 9"	15	NONE		48' - 9"	15	3-3-3-3-3	850	386		
FT	M	FT	M	FT	M	= "C" - STIRRUP	LB	KG	LB	KG
33' - 9"	10	3' - 9"	1	26' - 3"	8	3-2-3	871	395		
36' - 9"	11	3' - 9"	1	29' - 3"	9	3-3-3	913	414		
40' - 6"	12	3' - 9"	1	33' - 0"	10	3-2-2-3	981	445	1000	450
43' - 6"	13	3' - 9"	1	36' - 0"	11	3-3-3-2	1023	464		
46' - 6"	14	3' - 9"	1	39' - 0"	12	3-3-3-3	1067	484		
50' - 3"	15	3' - 9"	1	42' - 9"	13	3-3-2-2-3	1135	515		
53' - 3"	16	3' - 9"	1	45' - 9"	14	3-3-2-3-3	1177	534	750	340
56' - 3"	17	3' - 9"	1	48' - 9"	15	3-3-3-3-3	1222	554		
46' - 6"	14	6' - 9"	2	33' - 0"	10	2   3-2-2-3   2	1069	485		
49' - 6"	15	6' - 9"	2	36' - 0"	11	2   3-3-3-2   2	1111	504		
52' - 6"	16	6' - 9"	2	39' - 0"	12	2   3-3-3-3   2	1155	524	750	340
56' - 3"	17	6' - 9"	2	42' - 9"	13	2   3-3-2-2-3   2	1224	555		
59' - 3"	18	6' - 9"	2	45' - 9"	14	2   3-3-2-3-3   2	1266	574		
62' - 3"	19	6' - 9"	2	48' - 9"	15	2   3-3-3-3-3   2	1310	594		

## EXPLANATION OF CANTILEVERED SECTIONS

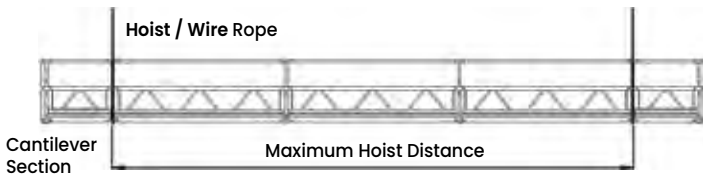

## EXAMPLE OF CHART PLATFORM CONFIGURATION

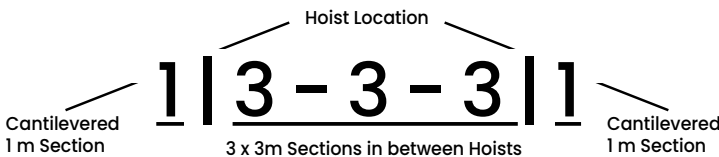

## TOTAL PLATFORM WEIGHT INCLUDES:

Stirrups, but not the hoist, roller bumpers, casters, material or workers.

### NOTES:

- All platform configurations as shown in the chart were tested and classified by U.L.
- Any platform configuration not listed on this chart must be approved by Bee Access or a competent and trained person from an authorized dealer.
- Chart above takes into consideration that two (2) hoists are used.
- Rated Working Load must be evenly distributed on Platform.



2145 Indian Road, West Palm Beach, FL 33409  
Phone: 561.616.9003 www.beeaccess.com

